

# **INSTRUCTIONS**

Automatic Pet Feeder

F09





# [CONTENTS]


Product Specification1
Hardware installation2
Panel introduction5
Time settings5
Manual feeding7
Feeding voice recording8
Turn off indicator LED10
Scheduled feeding10
Feeder alarm12
Others13
Reset to factory default14
FAQs14
FCC Warnings16
Warnings16
Warranty Information17
TWO YEAR NON-TRANSFERRABLE LIMITED WARRANTY
WHAT IS COVERED18
WHAT IS NOT COVERED18
Making a claim19
Have a Question For the Seller19

# ► Product Specification

Model	F09		
Capacity	4L		
Meals	6 meals per day		
Screen	LED screen		
One portion	9 grams(20 portions at most per meal)		
Food size	2-15mm(dry food only)		
Pet size	Sma <b>ll</b> /medium-sized dogs and cats		
Battery-powered supply	3× alkaline D batteries(not included)		
DC-powered supply	5V/1A		
Operating temperature	-10°C- 55°C/14°F-131°F		
Dementions	21 x 19.8 x 32.5cm/8.26×7.8×12.8in		
Product weight	1.4kg/3.1lb		

### ▶ Hardware installation


Open the battery compartment at the bottom of the feeder, insert the Micro USB power cord into the connector on the bottom, and extend the power cord out along the designed wire guide. You could also put in 3 pieces of D cell batteries, so that the feeder can still work automatically according to your scheduled feeding plan even without external power supply. Turn on the power switch.

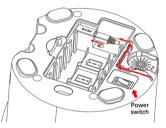


 Rotate the top cover, the feeding tray is in the grain bucket. Then place the feeding tray into the feeder from the bottom.



 
 Then please put the desiccant pack into the drying box on the top cover.




• For your pet's health, please wash the grain bucket and feeding tray regularly. The feeder body should not be filled with water. Please use a wring-able wet cloth to wipe.

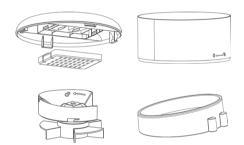


   To remove the parts above from the feeder, please follow the steps below.






 When you put the parts back to the feeder, please make sure all the parts are installed in place correctly.

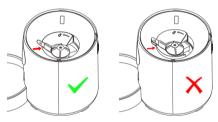

Note: Due to the wide variety of pet foods on the market, the mechanical structure of the feeder could not guarantee 100% fit all the types of pet food. We recommend to use only dry pet food size within 2mm to 15mm. Wet food and damp food are strictly prohibited from being placed in the feeder.


### ▶ Panel introduction

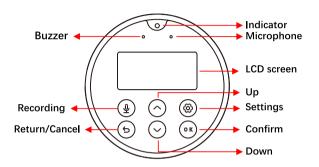

## ▶ Time settings

- The automatic feeding depends on the correct clock settings in the pet feeder. Please set the clock before setting up feeding plan.
- Long press the setting button for 2 seconds, the icons start to be flashing, it is in settings mode. As shown in Fig1, the clock icon is flashing in default to ready to set up clock.

- Press OK button to confirm to enter the time setting.
   The hour is flashing as shown in Fig2. Use the up/down selection buttons to set the hour (Time 24-hour clock) as shown in Fig3. You can long press the up/down selection button for fast setting.
- Press OK to confirm the hour. Then the minute start to flash, press the up/down selection button for minute setting, as shown in Fig4.
- Then press OK to save and return to settings mode.
   Press S Back/Cancel button to exit or go on to set up other settings.

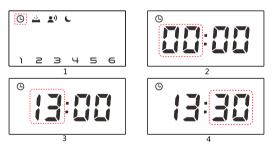

Tips: All operations during the setup process can be returned or canceled via the Sack/Cancel button.

The signs/numbers shown in screenshots enclosed by the dotted line represent the actual icon/number in the operation screen.

# Manual feeding

- The feeder supports fast manual feeding and a scheduled number of manual feeding functions. In the standby state, you can quickly feed 1 portion by quickly pressing down button twice within 1 second. Feed right now for multiple portions:
  - ★ Long press button for 2 seconds to enter the setting mode.
  - ★ Press down button to switch the flashing icon to the feeding one as shown in Fig5.
  - ★ Press ② to confirm and manual choose the feeding portions. You can use the up/down selections button to choose, as shown in Fig6.





★ Press OK to start feeding. Meanwhile, the operation screen will display the exact remaining portions need to feed as shown in Fig7.

# ► Feeding voice recording

- To develop the good feeding habits for pets, the feeder supports pre-recording a maximum of 10 seconds of audio, which is played during feeding.
- In standby state, press and hold the 

  great record button for 3 seconds until the feeder makes a "Drip" sound, and you can start recording at the microphone position. Note that the recording button should always be pressed continually 10 seconds during recording. After the recording is completed, the feeder will make two "Drip" sound.
- After recording done, you can preview the recorded audio by short pressing the precord button. If you need to change the recording, please re-record it. The closer to the microphone, the louder voice can be recorded.
- The default of voice recording playback is 3 times. It can be customized 5 times max at the setting:
  - ★ Press and hold the setting button �� for 2 seconds to enter the setting mode.

- ★ Select the down button to switch the flashing icon to recording button as shown in Fig8.
- ♣ Press OK to confirm play times of recording playback by using the up/down buttons as shown in Fig9. Press OK button to save.
- ★ To cancel the feeding recording and playback, You can set the number of playback to 0.



 


 
#### **Important Notice:**

- When pet feeder connects by power adapter regularly, the pet feeder recording will be played during feeding. It will play the times as setting, ex.3times/4times/5times... even the feeder finish feeding.
- When external power cut, the pet feeder will work by battery which you have installed previously to pet feeders.
   The feeding voice recording will be played only one time before feeding to pets. It will not played during feeding to pets. This is to save the battery energy for pet feeder to keep working further.

### ▶ Turn off indicator LED

- To prevent the feeder's indicator LED from being too bright, it could be turned off.
- Press ② button for 2 seconds, enter the setting mode.
- Press down button to switch the flashing icon to moon icon. As show in Fig10.
- Press up/down buttons to turn on/off the light as shown in Fig11. Press OK button to save.






## Scheduled feeding

 The pet feeder support the scheduled feeding exact portions at exact time. The feeder supports up to 6 meals per day.

- Press 🕸 button for 2 seconds, enter the setting mode.
- Press down button to switch the flashing icon to Digital 1 icon. As show in Fig12.
- Press OK to select the feeding portions, press up/down button to set portions as shown in Fig13 and Fig14.
- Press OK to go for feeding time setting as shown in Fig15 and Fig16, Press OK to save. Press Shack/Cancel button to exit and the auto feeding icon will show at standby state, as shown in Fig17.

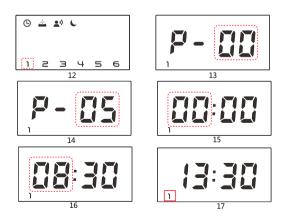

 If you need a automatic feeding for multiple meals, please repeat the above steps and select the corresponding Digital number icon according to the meals in the setting interface as shown in Fig18.





 To cancel a certain automatic feeding, you can set the feeding portions to be 0. Then second feeding was cancelled as shown in Fig20 and Fig21.





### Feeder alarm

 When the battery is low, the screen will be displayed low battery sign as shown in Fig22. When the food is insufficient, the screen will display the low food storage as shown in Fig23.

- When these two cases happened, the indicator light will be in a red breathing state.
- After renewing the battery or re-filling enough food, the red indicator and screen icons will disappear automatically within 60 seconds.





### Others

- The back-up battery is designed for short-term alternative when the external power supply is cut. Attention!
   When the pet feeder works with battery back-up, it will go to sleep mode and some of functions will be limited:
  - ★ There will be up to 60 seconds delay for the screen display and scheduled time feeding.
  - ★ The feeding voice recording only played 1 time before feeding;

★ The indicator light of the feeder is only on a short time every 30~60 seconds to remind, it will not be on continuously;

# Reset to factory default

If want to delete all previous setting, you can reset the feeder to factory default. In the standby state, press and hold the setting ② button and OK button at the same time for 3 seconds until the feeder makes a short beep.

### ▶ FAQs

- Q: Why is the feeding recording only played once or never when I set the recording multiple times?
  - A: Please press and hold the record button to record your voice first. If the feeder is working on battery supply only, the recording will be played only once before feeding.
- Q: Why the indicator LED still flashes after disabled?
  - A: When it is feeding, the indicator LED will flash and it cannot be disabled.

- Q: Why the motor runs but no food comes out?
  - A: Please make sure the removable parts installed into the feeder correctly. For more information, please refer page 3-4.
- Q: Why the motor runs reversely?
  - A: When the food gets stuck, the motor will run reversely to solve the food stuck problem.
- Q: Why the feeder shows low battery but the battery is new?
  - A: Some rechargeable batteries have low voltages, and the feeder may give false message. Please ignore or replace ordinary non-rechargeable batteries.

# ► FCC Warnings

### Warnings:

 Changes or modifications to this unit not expressly approved. Non-compliance could void the user's authority to operate the equipment.

#### Notes:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following Measures.
- \* Reorient or relocate the receiving antenna.
- ★ Increase the distance between the equipment and receiver
- ★ Connect the equipment into an outlet on a different circuit from that to which the receiver is connected.
- ★ Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.
 Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

# **▶** Warranty Information

#### ■ TWO YEAR NON-TRANSFERRABLE LIMITED WARRANTY

- To provide customers with quality shopping and user experience, we guarantee to replace or issue a refund or provide acceptable solutions to any defective products (as customer prefer)from the date of purchase to 2 years.
- Proof of purchase must be provided (Amazon order number or receipt)when making a claim to our customer support center.
- Warranty registration may be requested within a month since the date of purchase, by sending your Amazon order number to the mailbox:support@wopetshop.com.

- The warranty is not transferable. We only provide warranty services to buyers who purchased from our Amazon store and possess the purchase proof, and not to any other purchaser or subsequent owner.
- Price matching policy is not applicable. No price difference refund.
- Sellers are the responsible party ,Amazon allows different sellers to sell the same product,so please confirm the seller by checking the order details before contacting us.

#### WHAT IS COVERED

- Received defective or used (proof needed)products;
- Received with missing parts;
- Defective item under proper use.

#### WHAT IS NOT COVERED

- Purchase from non-Amazon channel or other physical stores;
- Gift without proof of purchase;
- Tampering/abnormal use/accidental damage;

- Replacements and parts;
- Installation fee/labor fee.

#### Making a claim


- If you have any problems when using our products, you can choose any of the methods to reach out of us.
- Email:support@wopetshop.com
- 30 days free Return & Replacement
- 2-Year product Warranty

### Have a Question For the Seller



Find Your Order

Click View Order Details

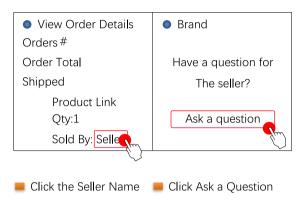

- Gifted parts,replacements,consumable products are not covered by the 2-year warranty.
- Manufactures' warranties may not apply in all cases,depending on factors such as use of the product,where the product was purchased,or who you purchase the product from,
- Please review the warranty cafefully, and contact the manufacture if you have any questions.

