




# FT50D Quick Start Guide

## Panel Introduction

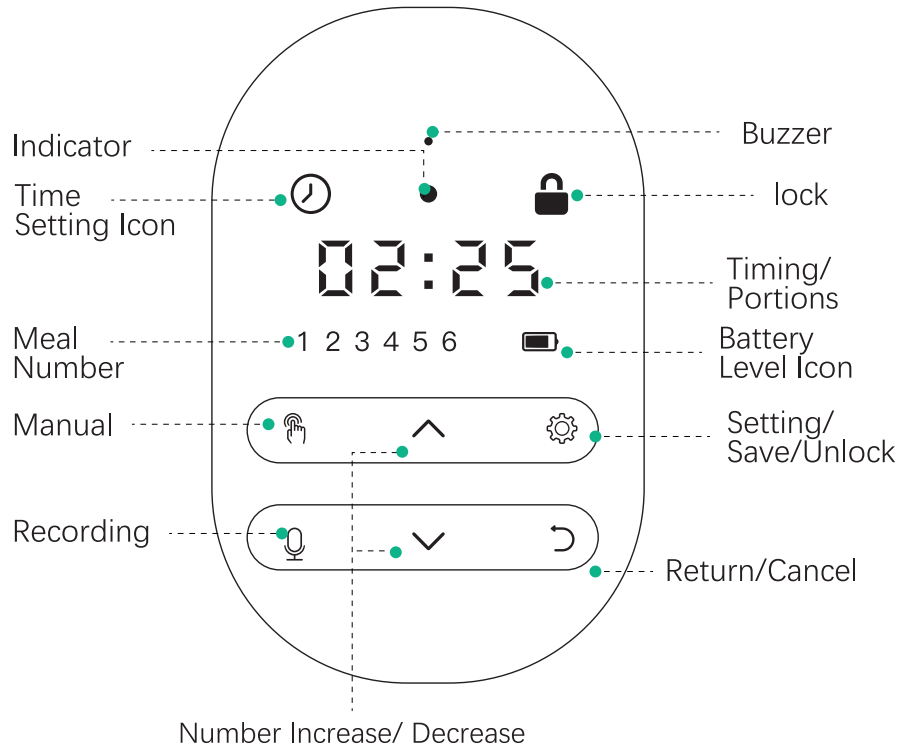

## Program Setting

Our device uses a 24-hour clock system, for example, 16:00 is equivalent to 4:00 PM (see page 16 in the user manual for details).

### Step 1 - Unlock

Power up OR long press 2s if screen locked.



### Step 2 - Set current time

Clock icon flashes, press to start setting current time with / then press to save.



### Step 3.1 - Set feeding time

Press then number 1 flashes, press and / to set the feeding time and press to save.



### Step 3.2 - Set feeding portion

Press the / to adjust the portion, then press to save.

#### Note:

max 20 portions for each meal,  
1 portions  $\approx$  4/3Tbsp (1/12cup, 20ml)



### Step 3.3 - Set other meals plan


Press move the next meal setting, repeat steps to set up feeding time and portion.




### Step 4 - Return main interface

All setting done press back to main interface.




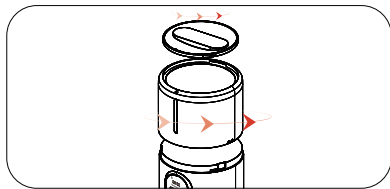


- 1** Rotate right on tank body and take out the inside accessories

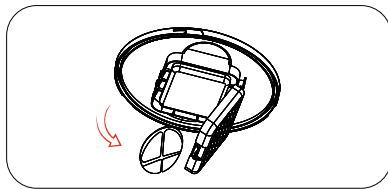


- 2** Rotate right to twist the lid and load in desiccant

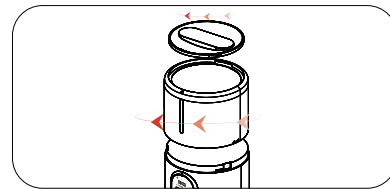


- 3** Rotate left the lid and tank body to install back

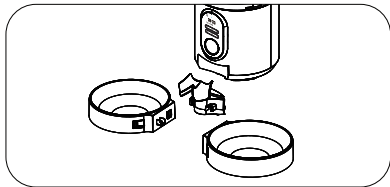

- 4** Assemble 2 trays in place and the bowls connector then insert

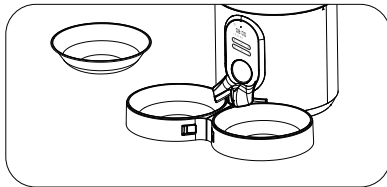

- 5** Install the meal splitter and put into the stainless steel bowls

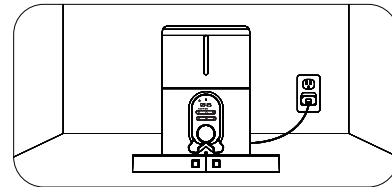

- 6** Connect the power

## FAQs

Problem	Solutions
<b>How to set the current time</b>	<ol style="list-style-type: none"> <li>1. Upon turning on, press the settings button to enter current time setup.</li> <li>2. The clock will flash, adjust the hours using the up and down keys, and save by pressing the settings button.</li> <li>3. At this point, the minutes will flash, adjust the minutes using the up and down keys, and again save by pressing the settings button.</li> <li>4. When the numbers for hours and minutes are no longer flashing, the current time setting is complete.</li> </ol>
<b>Food did not dispense at the set time</b>	<ol style="list-style-type: none"> <li>1. Ensure the food's diameter is less than 12mm, only suitable for dry food.</li> <li>2. Check if the turntable is jammed, if so please clean it first.</li> <li>3. Check if the food container still has food, please replenish in time if it's running low.</li> <li>4. If it is battery-powered, please ensure there's sufficient battery power. We recommend using the plug and batteries at the same time.</li> <li>5. For first-time use, please manually feed four times to ensure the food fills the slot. Press the manual feeding button on the machine to feed.</li> </ol>
<b>How much is each portion ?</b>	<p>1 portions <math>\approx 12g \approx 20ml \approx 1/12cup \approx 4tsp \approx 4/3Tbsp</math></p> <p>20 portions at most per meal</p>
<b>How to cancel the feeding plan for the first meal ?</b>	<p>Please set the number of feeding portions for the first meal to 0</p>

Thank you for choosing WOPET pet feeder.

Please read the quick guide before using, if you have any problems when using our product, kindly send email with order number to our mailbox: [support@wopet.com](mailto:support@wopet.com) for help, we'll response within 24 hours.



Scan the QR code to set up the feeder