




FT50D Quick Start Guide

Panel Introduction

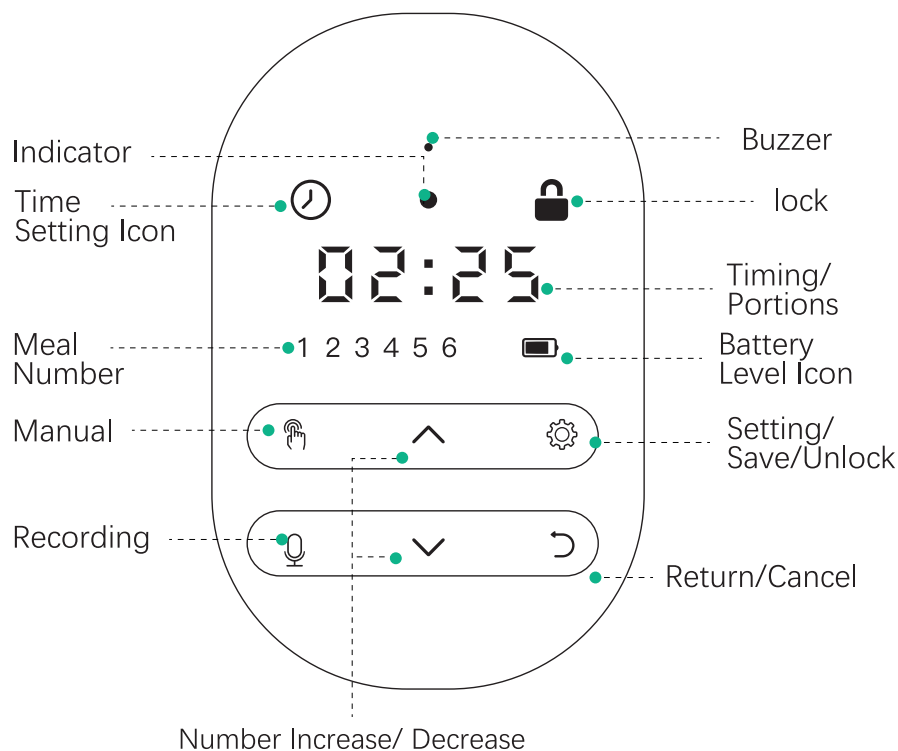

Program Setting

Our device uses a 24-hour clock system, for example, 16:00 is equivalent to 4:00 PM (see page 16 in the user manual for details).

Step 1 - Unlock

Power up OR long press 2s if screen locked.



Step 2 - Set current time

Clock icon flashes, press to start setting current time with / then press to save.



Step 3.1 - Set feeding time

Press then number 1 flashes, press and / to set the feeding time and press to save.



Step 3.2 - Set feeding portion

Press the / to adjust the portion, then press to save.

Note:

max 20 portions for each meal,
1 portions $\approx$ 4/3Tbsp (1/12cup, 20ml)



Step 3.3 - Set other meals plan

Press move the next meal setting, repeat steps to set up feeding time and portion.



Step 4 - Return main interface

All setting done press back to main interface.



Thank you for choosing WOPET pet feeder.

Please feel free to contact us by our mailbox: support@wopet.com , we'll response within 24 hours.



Scan the QR code to set up the feeder

FAQs

Problem	Solutions
How to set the current time	1. Upon turning on, press the settings button to enter current time setup. 2. The clock will flash, adjust the hours using the up and down keys, and save by pressing the settings button. 3. At this point, the minutes will flash, adjust the minutes using the up and down keys, and again save by pressing the settings button. 4. When the numbers for hours and minutes are no longer flashing, the current time setting is complete.
Food did not dispense at the set time	1. Ensure the food's diameter is less than 12mm, only suitable for dry food. 2. Check if the turntable is jammed, if so please clean it first. 3. Check if the food container still has food, please replenish in time if it's running low. 4. If it is battery-powered, please ensure there's sufficient battery power. We recommend using the plug and batteries at the same time. 5. For first-time use, please manually feed four times to ensure the food fills the slot. Press the manual feeding button on the machine to feed.
How much is each portion ?	1 portions $\approx$ 12g $\approx$ 20ml $\approx$ 1/12cup $\approx$ 4tsp $\approx$ 4/3Tbsp 20 portions at most per meal
How to cancel the feeding plan for the first meal ?	Please set the number of feeding portions for the first meal to 0