
Pet Water Fountain

W600 Pro

User Manual

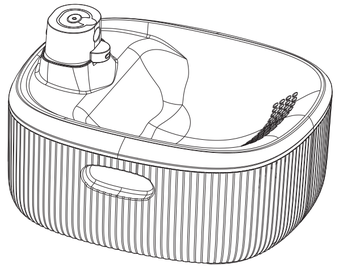

* Before using the product, please read this manual thoroughly and retain it for future reference.

Figures and illustrations in this User Manual are provided for reference only and may different from actual product appearance.

205Oz

6L

Made in China

SAFETY INSTRUCTIONS

WARNING

- Please choose DC5V⎓1A adapters in line with relevant national and regional standards to avoid any possible damages or safety hazards.
- Do NOT place any foreign object into the water tank.
- Only use attachments recommended or sold by WOpet. Using attachments from other manufacturers may create unsafe conditions.
- Do NOT operate the appliance if it is malfunctioning or has been damaged.
- Avoid attempting repairs on your own. Instead, contact our customer service immediately for further assistance: **support@wopet.com**.
- For safety, disconnect the power supply when the appliance is not in use. Always unplug the appliance when not in use, and before attaching, removing, or cleaning any parts.
- Do not allow the power adapter or plug to get wet during cleaning.
- This product is intended for indoor use only.
- Do not operate this product without water.
- Never pull the power cord to unplug the device from the wall outlet.
- If the plug becomes wet, turn off the power to that outlet immediately. Do NOT attempt to unplug.
- Replace the filter when water flow significantly decreases. If you have two or more pets, you may need to change the filter more frequently if it becomes clogged.

CAUTION

Do NOT allow pets to chew on or swallow any parts.
If an extension cord is needed, use one with the appropriate power rating.
Do NOT install or store the pet water fountain in areas exposed to weather or temperatures below 0°C (32°F).
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.

This equipment generates, uses, and can radiate radio frequency energy. If not installed and used according to the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try the following measures to correct the interference:

• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and the receiver.
• Connect the equipment to an outlet on a different circuit from the one to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.


COMPONENTS

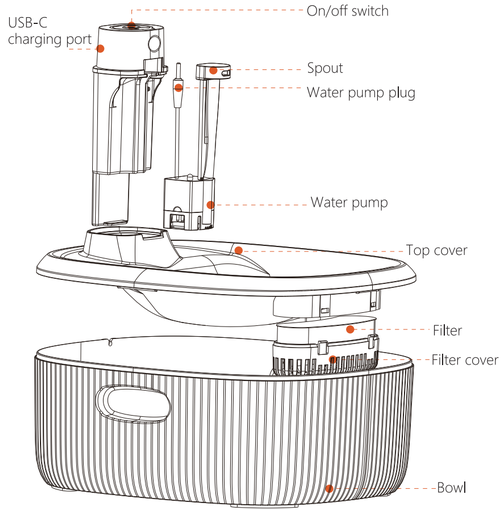



SETUP INSTRUCTIONS

- Place activated carbon filter in the pump housing groove and close.

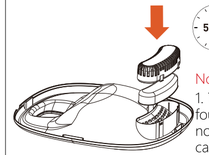


- warning tips: first soak the filter in a clean bowl for 5 minutes , then rinse the filter for 30 seconds before use.

Notes:

1. The filter must be fully soaked before the fountain is turned on; otherwise, water may not disperse smoothly through the filter, causing spillage.
2. Do not soak filter in the water tank of the fountain, as surface dust may be present.
3. Replace the filter element every 2-3 weeks.

* It's recommended to replace the filter every two weeks when it's shared by multiple pets.

- Insert the pump into the water fountain base

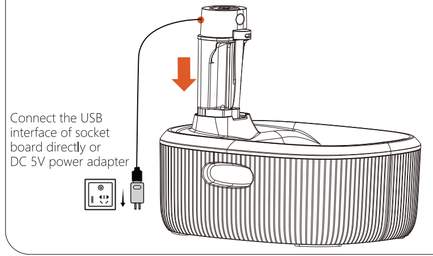

OPERATING MODE INTRODUCTION

OPERATING MODE INTRODUCTION

Power Supply Mode:

1. External Power Supply: The device requires an external power cord for operation when plugged in, suitable for use in areas with power outlets.

2. Battery-Operated Mode: The built-in rechargeable batter yallows for use without plugging in, ideal for indoor areas without power outlets.

Note: For first time use, fully charge the device before operating. If immediate use is needed, you can connect the external power cord to charge the water fountain while it operates. Once fully charged, unplug the power cord as needed.


Water Outlet Mode:

Regular Mode:

Provides a continuous water flow for 24 hours.

Induction Mode:

1. The water fountain features a built-in sensor that automati-cally dispenses water for 20 seconds when pet activity is detected within the sensing range.
2. Induction Angle: 120°(covering the front, left, and right sides).
3. Sensing Range: Approximately 1 meter in front and 20-50 cm on each side.

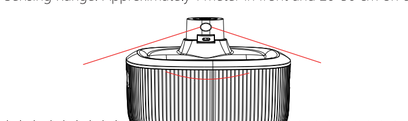


Note:

Regular Mode is only available when connected to external power. To conserve energy, Regular Mode is not available in battery-operated mode.

INSTRUCTIONS FOR USE

DISPLAY AND BUTTONS OVERVIEW

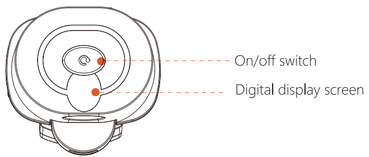

On/off switch

Long Press the key 3 seconds to power on ->Press and hold for 3 seconds again to shut down.

Note: during battery-operated, continuous water outlet mode is not supported and can not be switched by pressing the button.

Digital display screen

00% : Display the current battery level

: When red lights up, it indicates low battery level


SPECIFICATION

Product Name	Pet Water Fountain
Model	W600 Pro
Power Input	DC 5V 1A
Power Consumption	1.5W
Battery / Type	5000mAh / Li-ion Battery Pack
Materials	ABS
Capacity	6L


PUMP MAINTENANCE

Cleaning the pump is essential for the longevity of the fountain. It is recommended to clean the pump once every 2 weeks.


- Remove the pump cover and impeller cover in sequence.

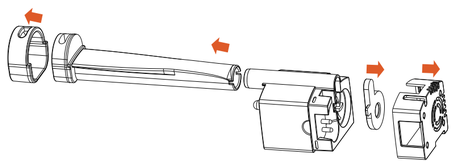

- Remove the impeller by the brush hook.

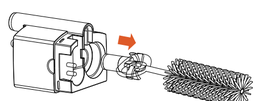

- Use the brush to clean the parts with water.

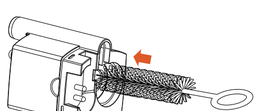

FAQS

Q: The water fountain cannot be charged.

A: 1. Use a compliant 5V adapter and correctly plug the Type-c cable and adapter.
2. Please do not disassemble the baseand battery by yourself. If the adapter cannot be used contact us at **support@wopet.com.**

Q: The water fountain does not discharge water after 20 seconds.

A: The water fountain is in automatic sensing mode for both pets and humans. In this mode, it will automatically dispense water when it detects movement, then turn off after approximately 20 seconds to conserve power.

Q: Why does the water fountain keep pumping out water?

A: When the water feeder is plugged into the power adapter, water will always flow out.

Q: The water fountain cannot dispense water and the red indicator light of the water pump is on?

A: The water level is too low; please add more water.

Q: Water output speed slows down.

A: 1. For the first use (or reuse after long-time storage), the water pump needs to discharge air, it's normal if the water output speed slows down.
2. There may be dirt in the pump. Please refer to the "How to Clean the Pump" section in the manual for cleaning instructions.

Q: Black residues and dirt appear in the water tank and on the filter element.

A: 1. Ensure that the water source is replaced regularly with clean water.
2.Rinse the filter element before use.

WARRANTY INFORMATION

For more questions, please email our support team:

support@wopet.com

- 30 days free Return & Replacement
- Standard Warranty: 1-Year product
- Warranty 2-Year Warranty Application: Please scan the QR code to finish the registration form on our official website within 30 days after you received the items.