Pioneer Automatic Pet Feeder



USER MANUAL

[CONTENTS]

Feeder Specifications 1

Key Features 2

Feeder Assembly 3

- Assemble bowl as shown in the picture 3
- Plug in the power adapter 4
- Install batteries in the battery compartment 4

Display Screen 5

Feeder Setting Guide 6

- Unlock / Lock feeder 7
- Set the current time 7
- Confirm the meal 8
- Voice recording 11

Feeder Cleaning 14

FAQs 15

Important Notes 16

FCC Warnings 17

Warranty Information 19

Have a Question? 22

Feeder Specifications

Model	F01 Plus
Capacity	7L
Screen	LED screen
Meal	1-5 Meal Per Day
One portion	10 grams(up 40 portions at most per meal)
Food size	2-15mm(dry food only)
Product size	L2468*W324*H384mm/9.69*12.76*15.12in
Product weight	2.08kg/4.58lbs
Product materials	ABS
DC-powered supply	5V/1A
Battery-powered supply	3*alkaline D batteries(not included)

Key Features



- Large capacity hopper (holds around 7lbs dry food)
- Human-friendly design, simple set up
- Voice recording / playback at programmed mealtimes
- Accurate portion comtrol
- Two power source options:Battery (NOT INCLUDED) and power adapter

Feeder Assembly

1 Assemble bowl as shown in the picture




2 Plug in the power adapter

- If you do NOT want to use the power adapter, you may use batteries.




3 Install batteries in the battery compartment

- (3 new D cell, alkaline batteries.Battery NOT included)

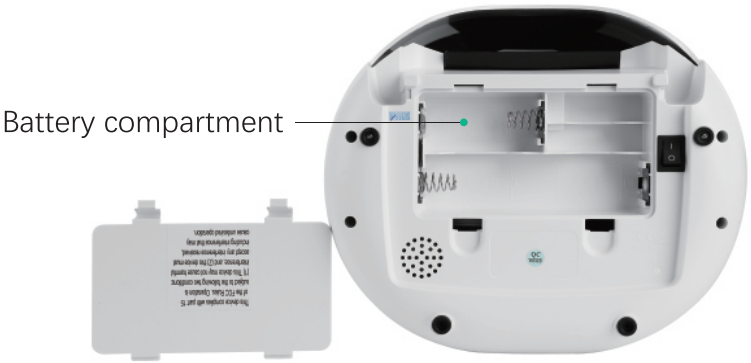

Display Screen

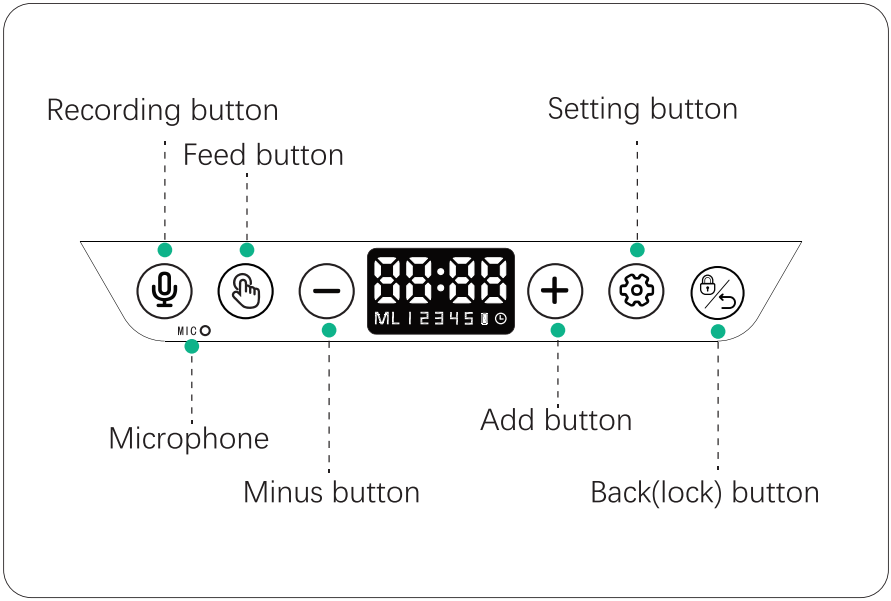

Note: ① When its working without any operation, the feeder will automatically turn off after 1 minute of non-use. All buttons cease working untill reactivation.

② Users can hold the button for 2s to unlock the feeder.

③ This machine is for use by multiple cats and dogs.

Feeder Setting Guide

TIP: Please be mindful of the conversion between 24-hour format and 12-hour format.

Example: 9:00AM = 9:00; 10:00PM = 22:00 More as below

12-hour Clock ⇄	24-hour Clock Comparison Chart		
00:00 (Midnight)	00:00 (Beginning of the day)		
		01:00PM	13:00
01:00AM	01:00	02:00PM	14:00
02:00AM	02:00	03:00PM	15:00
03:00AM	03:00	04:00PM	16:00
04:00AM	04:00	05:00PM	17:00
05:00AM	05:00	06:00PM	18:00
06:00AM	06:00	07:00PM	19:00
07:00AM	07:00	08:00PM	20:00
08:00AM	08:00	09:00PM	21:00
09:00AM	09:00	10:00PM	22:00
10:00AM	10:00	11:00PM	23:00
11:00AM	11:00	12:00PM (Midnight)	24:00 (End of the day)
12:00AM (noon)	12:00		

STEP 1— Unlock/Lock Feeder

[Must be Unlocked]

Hold for 2s to unlock / lock feeder.




STEP 2— Set the Current Time

Step 2.1 Set the Hour

① Press and hold for 2s to enter setting mode.




② When is flashing, use and to set the hour. For example: the current time is 20:30

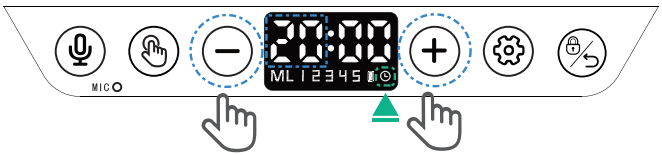

Step 2.2 Set the Minute

① Then press ⚙ again and use ⊕ and ⊖ to set the minute.


② Press ⚙ again to save and move to confirm the time and continue to meal settings.

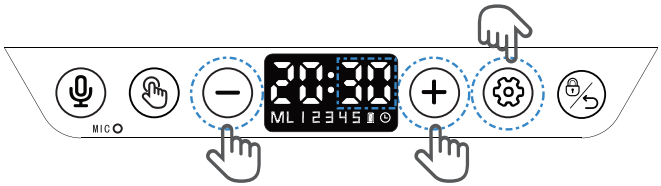

STEP 3— Confirm the Meal

① "ML 1" flashes to indicate that you are setting the first meal.


② Press ⚙ to confirm the meal and continue to portion size. As the picture shows:

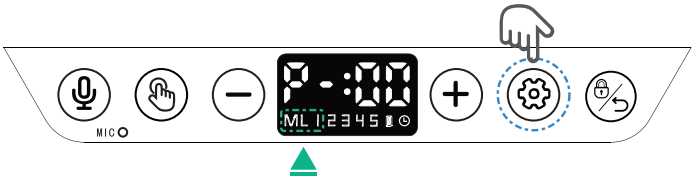

Step 3.1 Set Portion Size

① Portion are multiples of 10g, up to 400g. Ex. F-40*10g= 400g

② Example: If you want to provide a 10g serving, adjust the quantity to 1(P-01); if 20g, set P-02; and so on as shown in the picture.

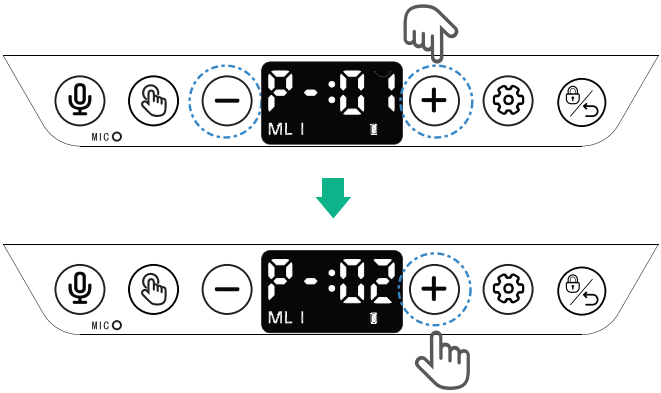


③ When the portion is set, press ⚙ to set the feeding time.



Step 3.2 Set Feeding Time

Set the hour by using ⊕ and ⊖, e.g.21:30, then press the ⚙ and adjust the minute again by using ⊕ and ⊖

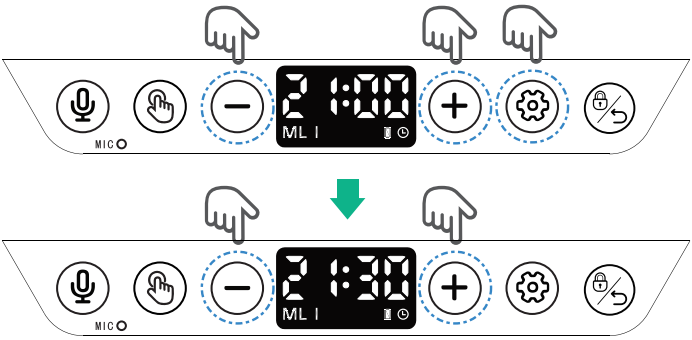

Step 3.3 Set Other Meals

① Press ⚙ again to skip to the next meal. Repeat the steps for meals 2-5; when finished, save and exit setting mode by pressing ⚙ again.

② Once set up sucessfully, the screen will show how many meals you have reserved a day.

E.g. ML1 ->Set up 1 meal a day ; ML 12 ->Set up 2 meals a day; and so on, ML1 2 3 4 5 ->Set up 5 meals a day.



Step 3.4 Confirm the Meal

If you want to set less than 5 meals, long press after the desired number of meals to save and exit the setting mode.



STEP 4— Voice Recording

Step 4.1 Start Recording

Hold ; when you hear a beep, the recording starts. Speak your voice message and to finish release the button. The recording will automatically be played back to you. Max recording timne is 10s.



Step 4.2 Play the Recordling

After recording, you can play it back by pressing .



Step 4.3 Delete Recording

Hold pressed until you hear a beep, then release without recording a message.



STEP 5— Manual Feed

[Must be Unlocked]


Press to feed 1 portion.



STEP 6— Reset to Factory Defaut

[Must be Unlocked]

Press and hold + and − for 5s to restore factory settings.

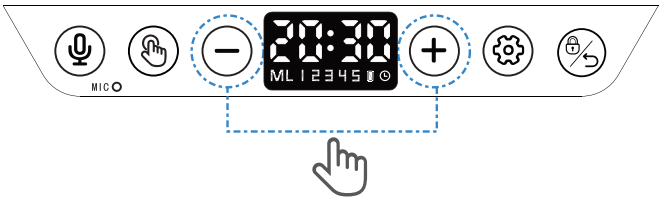

Feeder Cleaning

- Unplug device and remove the three batteries
- Disassemble the Hopper and Bowl
- Hand clean using a soft cloth and hand dry

Warning:

The base unit should not be submerged in water at any time, as this will damage the electronic components and void the warranty



FAQs

Q: The low battery light is flashing.

A: Replace old batteries with new D cell, alkaline batteries. Normally these batteries can last up to 1 year.

Q: What is the weight of 1 portion?

A: one portion is about 10g.

Note:

There may be a slight difference between portions with different size foods.

Q: How do I reset to factory defaut?

A: Hold ⊕ and ⊖ for 5 seconds to restore factory settings.

Any more questions, please email our support team:

support@wopet.com

Scan the QR code to set up the feeder

Important Notes

- Requires THREE D size batteries, alkaline batteries only (Batteries NOT included).
- The estimated life of one set of batteries is one year.
- Keep fingers and hands away from food wheel.
- Always turn the feeder off before cleaning.
- Check the low battery light frequently to ensure the feeder has power.
- Check the level of food frequently to be sure the feeder is dispensing properly.

FCC Warnings

- Changes or modifications to this unit not expressly approved. Non-compliance could void the user's authority to operate the equipment.

Notes:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur with any particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit from that to which the receiver is currently connected.
- Consult the dealer or an experienced radio / TV technician for help. Shielded interface cables must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

Warranty Information

1 NON-TRANSFERRABLE LIMITED WARRANTY

① To provide customers with a quality shopping and user experience, we guarantee to replace, issue a refund, provide acceptable solutions to any defective products (as the customers prefers) from the date of purchase up to 2 years.

② Proof of purchase must be provided (order number or receipt) when making a claim to our customer support center.

③ Warranty registration may be requested within a month since the date of purchase, by sending your order number to the mailbox: support@wopet.com

④ The warranty is not transferable. We only provide warranty services to buyers who purchased from our Amazon store and WOpet official website store and possess proof of purchase - not to any other purchaser or subsequent owner.

⑤ Price matching policy is not applicable. No price difference will be refund.

⑥ Sellers are the responsible party. Amazon allows different sellers to sell the same product, so please confirm the seller by checking the order details before contacting us.

2 WHAT IS COVERED

- Receiving defective or used (proof needed) products;
- Receiving with missing parts;
- Item is defective under proper use.

3 WHAT IS NOT COVERED

- Purchase from non-amazon channels /non-WOpet official website store/other physical stores;
- Gift without proof of purchase;
- Tampering/abnormal use/accidental damage;
- Replacements and parts;
- Installation fee/labor fee;

4 MAKING A CLAIM

- If you have any problems when using our products, please send an email to the mailbox: support@wopet.com
- 30 days free Return & Replacement
- Standard Warranty: 1-Year product Warranty
  2-Year Warranty Application: Please scan the QR code below to finish the registration form on our official website to get 2-Year in total warranty.

Note: Please finish the form within 30 days after you received the items.

Have a Question?

1.Find your order



2.Click "View order details"



3.Click the Seller name



4.Click “Ask a question”



- Gifted parts, replacements, and consumable products are not covered by the 2-year warranty

- Manufactures' warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased,or who you purchase the product from.

- Please review the warranty carefully, and contact the manufacture if you have any questions.



Boundless Love for Pets